


MT 6

Electronic Metal Locator

Caution:

- The MT 6 will only locate metal objects. Nonmetallic objects such as wood studs or PVC pipe cannot be located with this product.

- Avoid wearing any jewelry, including watches, when using this product. The metal may cause inaccurate results.

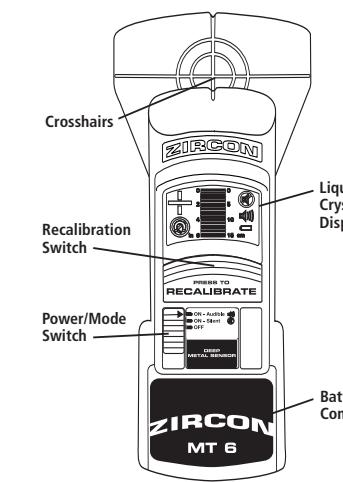

ZIRCON

LIMITED 1 YEAR WARRANTY

Zircon Corporation, ("Zircon") warrants this product to be free from defects in materials and workmanship for one year from the date of purchase. Any in-warranty defective product returned to Zircon*, freight prepaid with proof of purchase date and \$5.00 to cover postage and handling, will be repaired or replaced at Zircon's option. This warranty is limited to the electronic circuitry and original case of the product and specifically excludes damage caused by abuse, unreasonable use or neglect. This warranty is in lieu of all other warranties, express or implied, and no other representations or claims of any nature shall bind or obligate Zircon. Any implied warranties applicable to this product are limited to the one year period following its purchase.

IN NO EVENT WILL ZIRCON BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE OR MALFUNCTION OF THIS PRODUCT.

In accordance with government regulations, you are advised that:
(i) some states do not allow limitations on how long an implied warranty

lasts and/or the exclusion or limitation of incidental or consequential damages, so the above limitations and/or exclusions may not apply to you, and further (ii) this warranty gives you specific legal rights and you may also have other rights which vary from state to state.
Return product freight prepaid with proof of purchase date (dated sales receipt) and \$5.00 to cover postage and handling, to:
Zircon Corporation
*Attn: Return Department
1600 Dell Avenue, Unit K
Campbell, CA 95008-6992 USA
Be sure to include your name and return address. Out of warranty service and repair, where proof of purchase is not provided, shall be returned with repairs charged C.O.D. Allow 4 to 6 weeks for delivery.
Customer Service, 1-800-245-9265 or 1-408-866-8600
E-mail: info@zircon.com
U.S. Patent #5729143
©2004 Zircon Corporation • P/N 58932 • Rev D 03/04

INSTALLING THE BATTERY

- Slide open the battery compartment door and connect the 9-volt battery to the battery clip. Insert the battery into the MT 6 battery compartment and replace the door. With normal use, one 9-volt battery should last approximately one year.




TURNING THE MT 6 ON AND OFF

- The 3 position mode select switch turns the MT 6 on and off and selects either audible or silent operation.

Turn the unit on by moving the mode switch to either the AUDIBLE or SILENT position. This should be done in air and away from any metal.

- If desired, mark target locations. Crosshairs on the top and front of the unit show where sensitivity is maximum.

GETTING FAMILIAR WITH THE DISPLAY

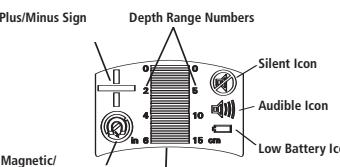

- The display has indicators that indicate status and show information about detected objects (targets).

There are 3 status indicators: low battery, audible, and silent icons. The low battery icon is displayed when the battery has less than five hours of use remaining. The AUDIBLE icon will always be on when the unit is in the AUDIBLE mode. In the SILENT mode, the SILENT icon will be active. The remaining icons indicate information about a target:

• The magnetic icon is displayed whenever the unit detects magnetic material, such as iron. If nonmagnetic material (copper, for example) is detected, the icon will show a line through the magnet. Neither icon is displayed until the MT 6 detects metal at less than 6 in. (152 mm) deep.

• The depth bars represent the depth of the target. Depth is indicated in both inches and centimeters. The bars begin from the bottom of the display and sequentially turn on as the MT 6 gets closer to the metal. The depth numbers correspond to the depth to the top surface of the metal target.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.

- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- Press and release the PRESS TO RECALIBRATE switch. All icons on the display will light momentarily during calibration.
- Rescan target areas. A final determination of depth can now be obtained from the depth indicator.

- If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note: If a grid pattern exists, such as may occur with rebar in concrete, there may be no area free of metal. In this case, best results may be obtained by calibrating midway between targets. However, accuracy may be affected and recalibration may not improve overall depth accuracy.

- If the scanning surface is fairly rough, place a thin piece of cardboard between the surface and the unit. The thickness of the cardboard must be subtracted from the depth reading to determine the actual depth to the target when using this procedure.
- To turn the unit away from the surface to be scanned.
- Place the unit on the scanning surface and move from side to side. As a target is approached, an increasing number of depth bars will show. At the point closest to metal, the plus sign will change to a minus sign and there will be a beep (in AUDIBLE mode).

Note: If a magnetic and nonmagnetic object (e.g., rebar and copper pipe) are positioned side-by-side or on top of each other, the MT 6 may have difficulty locating them.

Note: If the unit fails to calibrate, you will hear a long, low-pitched tone and all the depth bars will be displayed. If this happens, check the area for any large metal objects and remove them or move the unit to a different location. Then try turning the unit on again.

- To turn the MT 6 off, move the mode switch to the OFF position.

- The auto power off feature turns off the MT 6 after five minutes of inactivity. After it turns off, the unit loses its calibration.

To recalibrate:

- Locate an area on the surface where there is no indication of metal.

Note